



Montagevorschläge Suggested methods of Installation

BEFESTIGUNGSPUNKTE / BUILT-IN HANGERS

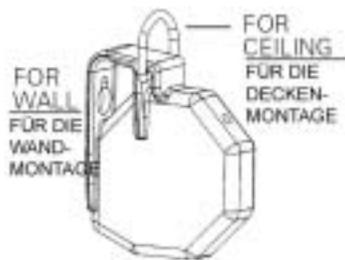

DECKENBEFESTIGUNG / CEILING SUSPENSION

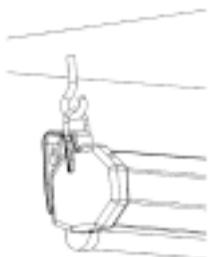

SCHRÄGSTELLER (Zubehör)
zur Vermeidung vom Keystone Effekt
TILT LOCK (Accessory)
for Keystone Elimination



Pflege der Bildwand

SCHÜTZEN SIE IHRE BILDWAND und rollen sie die Bildwand in das Schutzgehäuse ein, wenn sie nicht benutzt wird. Vor dem Einrollen prüfen sie, dass die Vorder- und Rückseite der Bildwand frei von Staub, Schmutz und Fremdkörpern sind. Mit einem weichen Staubpinsel können sie Fremdkörper entfernen. Schmutz kann eventuell mit einem weichen gut mit Wasser verdünntem Spülmittel und einem weichen Schwamm entfernt werden.

Betriebsanweisung

AUSFAHREN DER BILDWAND

Ziehen sie die Bildwand ganz aus dem Gehäuse, halten dann kurz an und lassen die Bildwand vorsichtig langsam wieder hochfahren, bis die Rastung der Feder einklinkt.

EINFAHREN DER BILDWAND

Ziehen sie am Zugbügel die Bildwand ein wenig nach unten und lassen dann die Bildwand schnell nach oben einrollen. Lassen sie die Hand am Zugbügel damit sie die Geschwindigkeit kontrollieren können. Auf keinem Fall dürfen sie die Bildwand ohne Kontrolle ins Gehäuse einfahren lassen da sonst eine Beschädigung der Bildwand zu erwarten ist !

Care of screens

PROTECT YOUR SCREEN by keeping it rolled in its protective case when not in use. Always examine both front and back of surface before re-rolling into case to make certain screen is free of dust, dirt or other foreign matter. Use a very soft duster brush gently to remove foreign particles.

Operating Instructions

TO LOWER PICTURE SURFACE


Pull screen down all the way. HESITATE – then allow screen to retract VERY SLOWLY until it locks in place.

TO RAISE PICTURE SURFACE

Pull down on the pull bail, then raise quickly, as a window shade. Keep control of the picture surface. Do not allow it to roll uncontrolled into the case or damage is sure to result.

Montagevorschläge Suggested methods of Installation

WANDMONTAGE / WALL-MOUNTING Zubehör / Accessories

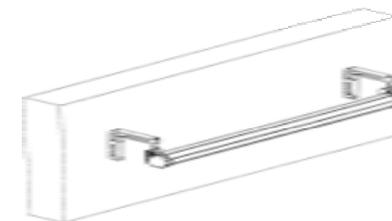

No. 6 MONTAGEWINKEL

Bildwandabstand zur Wand ca. 15 cm
WALL BRACKETS
Screen can be extended 6" from wall.



No. 11 MONTAGEWINKEL

Bildwandabstand zur Wand ca. 25 oder 36 cm
WALL BRACKETS
Screen can be extended 10" or 14" from wall.



No. 23 MONTAGEWINKEL

Bildwandabstand zur Wand ca. 46 oder 51 oder 61 cm
WALL BRACKETS
Screen can be extended 18 1/4" or 20 or 24" from wall.

